



HP Photosmart c4780 New Scanning Piece Replacement

The sliding piece that scans documents in the printer can be easily replaced in the case of malfunction.

Written By: Renee Lamb





TOOLS:

- [iFixit Opening Tools](#) (1)
- [T10 Torx Screwdriver](#) (1)



PARTS:

- [Replacement Sliding Scan Piece \(Code CA4B7P00310040941070\)](#) (1)

Step 1 — Outer Shell Disassembly



- Lift the top cover of the scanner.
- Using a small plastic prying tool, carefully pry the plastic frame surrounding the glass from the printer hood.
- Pry the side piece from the printer hood.
- Pull the frame out.

Step 2



- Using a T10 screwdriver, unscrew the two screws that fasten the frame to the printer hood.

Step 3



- Pushing the clip behind the cover piece in, pull the cover piece outwards.

Step 4




- There are two screws under where the power button panel was and across the printer slider. Unscrew them with a T10 screwdriver.

Step 5




- Pull the printed circuit board from the main printer body.
- Unplug the small ribbon cable from the circuit board.

Step 6

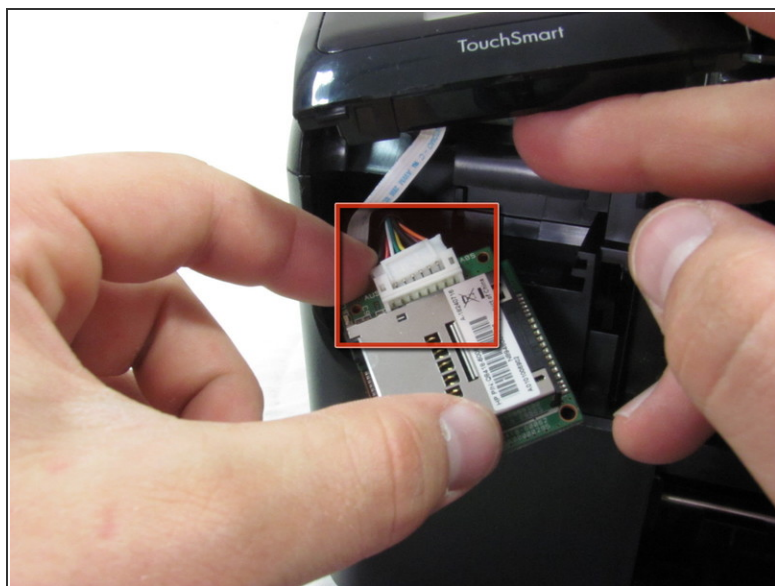

- Pull the memory card reader's circuit board out of its slot.
- Detach the wire harness.

Step 7

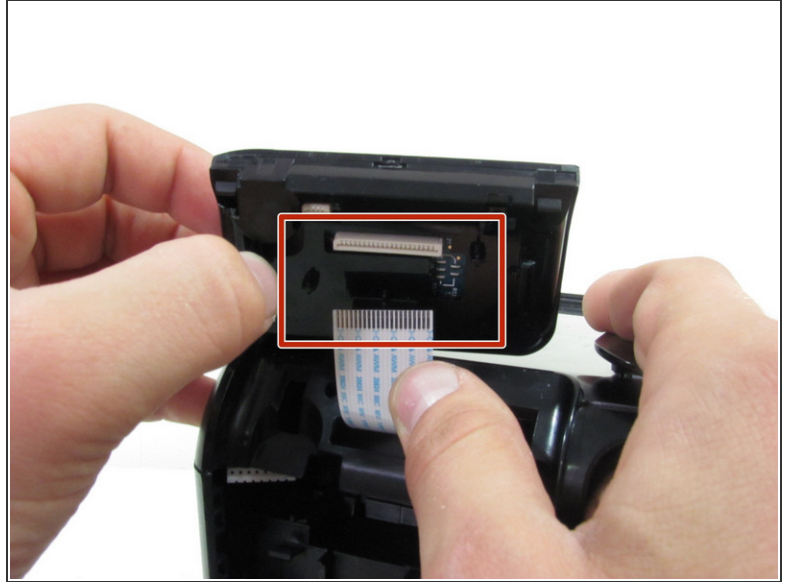

- Press the clip directly behind the TouchSmart panel.
 - Pull the clip to detach.
 - Disconnect the ribbon cable from the TouchSmart panel to detach from the main printer body.
- i** Do not hesitate to use force to remove the TouchSmart panel.

Step 8



- Gripping the printer hood, pull upward.

Step 9 — New Scanning Piece



- Lift the scanning lid from the lower portion of the printer hood.

Step 10



- Leaving the ribbon connected, lift the sliding scanner off the track.
- Pull the ribbon cable out of the slot on the scanner circuit board.
- Insert the scanning piece into the rolling track.

To reassemble the sliding scan piece, follow these instructions in reverse order.

This document was last generated on 2017-06-25 02:08:33 PM.